



FURNITURE

SERIES: TW/TWB/TWCC

BRACKET: PLASTIC
WHEEL: TWIN BLACK NYLON
BEARING: PLAIN



TW/TWB							
TW-40	40	10/10	40	8	40	46	40
TW-50	50	11/11	47	8	50	54	50
TW-60	60	13/13	52	9	55	65	60
TWB-40	40	10/10	40	8	40	46	40
TWB-50	50	11/11	47	8	50	54	50
TWB-60	60	13/13	52	9	55	65	60



TW/TWB							
TW-75	75	14	68	10	62	84	100
TWB-75	75	14	68	10	62	84	100
TW-100	100	16	72	11	92	102	100
TWB-100	100	16	72	11	92	102	100

FITTINGS

	PLATE CODE	CASTOR SIZES	PLATE	HOLE CENTRE	HOLE DIAMETER
	T1	40 & 50	38x38	25.4x25.4	5.2
	T2	75	55x65	41x51	6.5
	T3	100	55x65	41x51	8

	FRICTION STEM CODE	CASTOR SIZES (mm)	FRICTION
	FS1 + Required length	40/50	11x22

	THREAD STEM CODE	CASTOR SIZES (mm)	THREAD X LENGTH
	TS1 + Required length	40/50	8x15 / 10x15 / 10x25
	TS2 + Required length	60	8x15 / 10x20
	TS3 + Required length	75	12x25
	TS4 + Required length	100	12x25

	WOOD SOCKET / STEM CODE	CASTOR SIZES (mm)	WOOD SOCKET / STEM
	WS1	40 & 50	9x29 / 8x38



TWCC CHAIR CASTOR				STEM			
CTW-50	50	11/11	54	11x22	50	57	50



PUCTW-50				STEM			
	50	11/11	45	11x22	50	59	50